

## Mounting Instruction VC 400



**VERTRIEB DURCH**  
**Fritz Adam Verpackungsmaterial**  
**GmbH & Co. KG**  
[www.fritzadamshop.de](http://www.fritzadamshop.de)


1



Pull buckle on band, ears pointing towards end of band. Form clamp, holding band on band, then push buckle back over the doubled band, bending the end approx. 1" under buckle.


**Please notice that knurled ring has to be in position as shown in figure 3!**

2

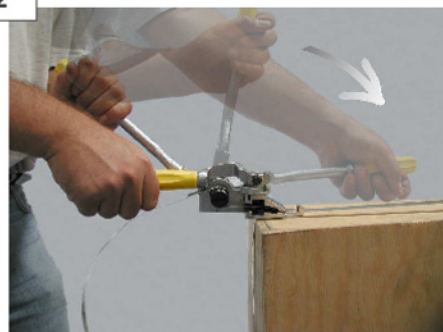

Place band in the nose of tool and ratchet slots. Hold short handle in right hand and push long handle forward in full arc with the left hand. This tightens the strap. When required tension has been applied, bring long handle to original starting position.

3

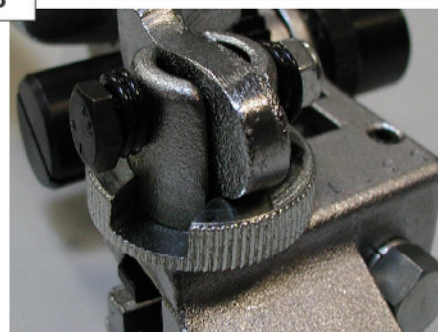

**Before rolling over the tool over the buckle, it's very important to turn the knurled ring as shown in figure 3 + 4!**

4



5



Now roll tool over buckle. Hold long handle in left hand and short handle in right hand.

6



Pull on long handle with left hand, band is cut off to correct length. Then move tool forward and away from the buckle.

7



Hold stub of band with thumb and bend it over buckle.

8



Hammer stub of band flat over bridge of buckle. Complete the clamp by hammering down ears over stub.